Air Brakes



Safety Valves Assemblies



GTA-205105 All ports: 1/4" NPT

Replaces: Bendix 205105 (ST-1)

GTA-284143 PT: 3/8"

Pressure setting: 150 PSI Replaces: Bendix 284143 (ST-3)

Part Number	Description
GTA-205105	Safety valve assembly
GTA-284143	Safety valve assembly



12 volt direct current Manual override Universal - normally opened or closed Replaces: Neway 90054076

Part Number	Description
GTA-90054076	Solenoid valve directional control



Delivery ports: (4) 3/8" NPT Supply ports: (1) 3/8" NPT Control ports: (1) 3/8" NPT Reservoir (A): 1/2" NPT

Reservoir (B): GTA-110170 1/2" NPT

GTA-110171 3/8" NPT

Cover Rotate: GTA-110170 none GTA-110171 90 degrees

Replaces: Sealco 110170 110171

Part Number	Description
GTA-110170	Spring brake valve
GTA-110171	Spring brake valve

Solenoid Valves



GTA-90054074 All ports: 1/4" NPT Replaces: Neway 90054074

90054075

Part Number	Description	
GTA-90054074	Solenoid valve (closed) directional control	
GTA-90054075	Solenoid valve (open) directional control	

Spring Brake Valves



Delivery ports: (4) 3/8" PT Service ports: (1) 1/4" PT

Service/Spring brake reservoir: (1) 1/4" PT

Trailer Supply: (1) 1/4" PT Trailer Service: (1) 1/4" PT

Reservoir mounting: (1) GTA-065437 male 3/4" PT

GTA-065439 male 1/2" PT

Replaces: Bendix 065437 (SR-5) 065439 (SR-5)

Part Number	Description
GTA-065437	Spring brake valve
GTA-065439	Spring brake valve



Body height: 4-3/16" Body width: 4-5/8"

Delivery ports: (1) 1/4" PT Supply ports: (1) 1/4" PT Control ports: (1) 1/4" PT Reservoir ports: (1) 1/4" PT Reservoir Trip Pressure: 55 PSI Replaces: Bendix 286364 (SR-1)

Part Number	Description
GTA-286364	Spring brake valve