




Air Brakes

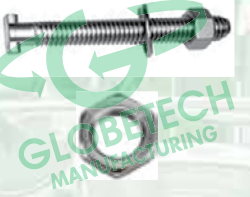

Part Number	Description	Replaces Ranger
GTA-30DB	Dust boot	RB-30DB
GTA-006	Type 30 return spring	RB006
GTA-30PS	Type 30 power spring	RB30PS
GTA-009	Carriage bolt&nut 3/8"-16 (Attaches clamps to chamber)	RB009
GTA-010	Jam nut 5/8"-18 (Attaches end of push rod for clevis mount)	RB010
GTA-30DC	Dust caps (Black cap that attaches to bottom of chamber)	RB-30DC
GTA-008	T-Bolt Assembly set (1-Washer, T-bolt, T-bolt nut)	RB008
GTA-9PR	T-9 push rod	RB-9PR
GTA-12PR	T-12 push rod	RB-12PR
GTA-16PR	T-16 push rod	RB-16PR
GTA-20PR	T-20 push rod	RB-20PR
GTA-24PR	T-24 push rod	RB033
GTA-30PR	T-30 push rod	RB034
GTA-36PR	T-36 push rod	RB-36PR
GTA-9NPH	T-09 non pressure "stud" housing	RB-9NPH
GTA-12NPH	T-12 non pressure "stud" housing	RB-12NPH
GTA-16NPH	T-16 non pressure "stud" housing	RB-16NPH
GTA-20NPH	T-20 non pressure "stud" housing	RB-20NPH
GTA-24NPH	T-24 non pressure "stud" housing	RB-24NPH
GTA-30NPH	T-30 non pressure "stud" housing	RB020
GTA-36NPH	T-36 non pressure "stud" housing	RB-36NPH

Air Brakes