




Door Hardware

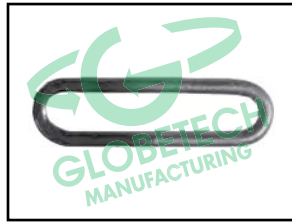

Part Number	Description	Replaces Fleet Engineers #
GT-1323	Door holdback, 6" loop used in post style holdback kits	022-01078



Part Number	Description	Replaces Fleet Engineers #
GT-1324	5" footman loop 5" overall length 4-1/4" C-C	022-00628



Part Number	Description	Replaces Fleet Engineers #
GT-1327	Holdback loop, Fruehauf style 8-1/2" overall length 2-1/4" x 2/3" base plate	022-00487



Part Number	Description	Replaces Wabash #	Replaces Fleet Engineers #
GT-1328	Door holdback w/3 chain links & HD snap	525461	021-00050




Part Number	Description	Replaces Todco
GT-1400	End hinge, T-style, zinc-plated, for roll up doors	69035



Part Number	Description	Replaces Todco
GT-1401	Center hinge, zinc-plated, for roll up doors	61196



Door Hardware

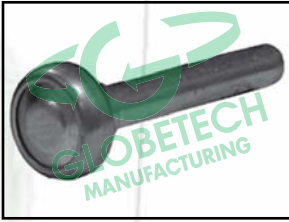

Part Number	Description	Replaces Todco#
GT-1402	1" steel roller	61174



Part Number	Description	Replaces Todco #
GT-1403	2" nylon roller	70225

Kit Replacements

Create kits similar to Fleet Engineer kits with standard Globetech components:



GT-1331



GT-1332




GT-1333

Globetech Kit	Globetech replacement part numbers for kit	Description	Replaces Fleet Engineers kit#
GT-1331	(1) GT-1300 and (1) GT-1328	Handle style anchor, chain, lap link & snap	021-00051
GT-1332	(1) GT-1324, (1) GT-1313 and (1) GT-1307	Handle, post holdback & 4" loop	021-00373
GT-1333	(1) GT-1324, (1) GT-1323 and (1) GT-1307	Handle, post holdback & 6" loop	021-00374



Wabash Style Holdback Oblong Loop and Chain Kit

GT-1329 Oblong Loop and Chain
Replaces WAB06302250

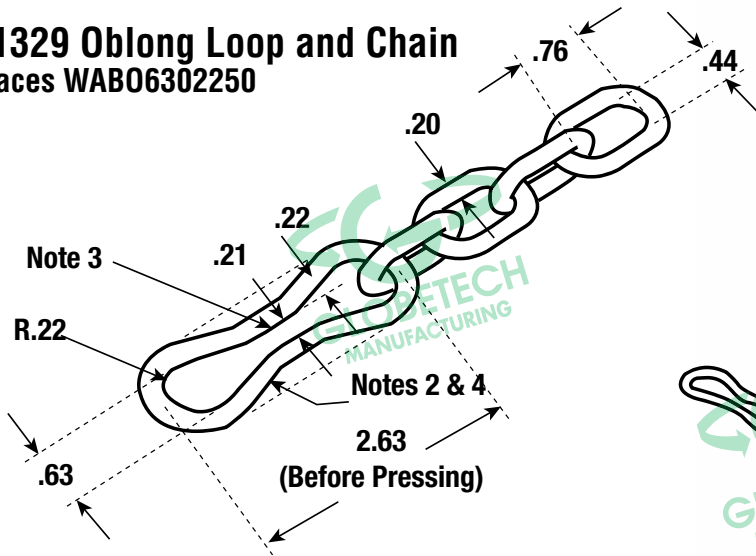

GT-1311 Hook
Replaces WAB06302200



Notes:

1. Four 4/0 Passing links-welded
2. Weld oblong link-grind so there is maximum .03 high flashing
3. Press in sides of oblong link to within .21 of each other
4. Oblong link weld should be free of cracking after pressing

GT-1334 Kit
Replaces WAB06302201



GT-1334 Kit Includes

- GT-1311 Hook
- GT-1329 Oblong Loop and Chain

GT-1336 Kit
Wabash Style Vent Door
Holdback Loop
Replaces WAB06303036

